




Test Procedure

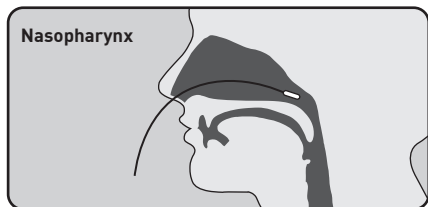

Insert a sterile swab into nasopharynx, and collect the specimens.

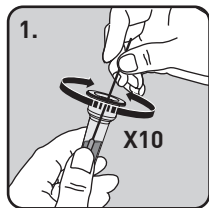


X10

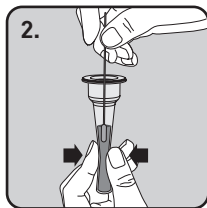


3. Remove and discard swab.




4. Place the nozzle cap with tube.

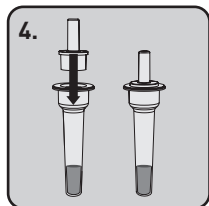

5. Apply 4 drops (~100 ul) of the solution into the sample well.

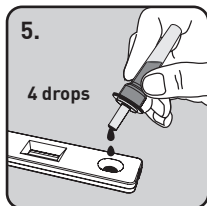

6. Read after 15 mins.

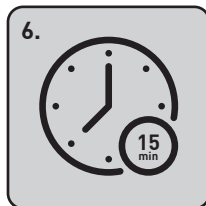


OSANG HEALTHCARE

Test Result



Positive



Invalid

